

# HD COAXIAL CAMERA

## Quick Operational Guide




Please read this manual carefully before installing the camera, and keep it for reference.

### 1. Camera settings.

Cable keyboard: the keyboard has five keys Up Down Left Right and press center for Enter. The cable has BNC and DC jack, BNC for video output DC for 12 voltage input.

When the camera working normally pressing key to Up with 5s the video switch to AHD, Left for TVI, Right for CVBS, Down for CVI, Center key enter the menu, then up down key for move cursor to up or down, left right key for select center key for confirm.

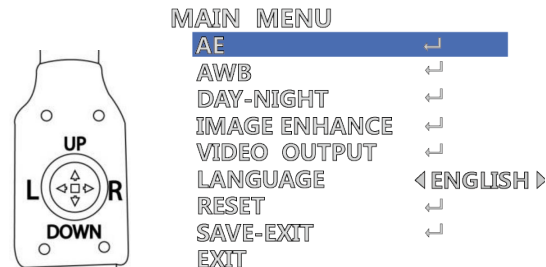

**AE:** setup the brightness exposure mode gain.

**WB:**setup the white balance mode.

**DAY-NIGHT:**setup the b/w color mode.

**IMAGE ENHANCE:**setup the contrast sharpness color gain DNR and WDR.

**VIDEO OUTPUT:**setup the video signal mode.

**LANGUAGE:**setup the menu Language.

**RESET:** reset the default camera to factory.

**SAVE-EXIT:** save the setup parameter when you changed the parameter.

**EXIT:** exit the menu.

## 2. Specification.

Item	Parameter	Unit
Voltage	12	Volt
Current	300	mA
Lens	3.6/4	mm
Image sensor size	CMOS 1/2.8 1/3	Inch
Video output	75	Ohm
Video signal	TVI CVI AHD CVBS	
Video system	NTSC / PAL	
Pixel	720P/1080P/4MP/5MP	
Audio output	Nonsupport	
Night vision	Supported (24leds)	
Video jack	BNC	
Accessories	Expansion screws 3 sets	
Dimension without bracket	65*65*90mm	
Bracket dimension	60*60*80mm	